


EN Assembly

FR Montage


SE Montering

ES Instrucciones De Montaje


DE Montage

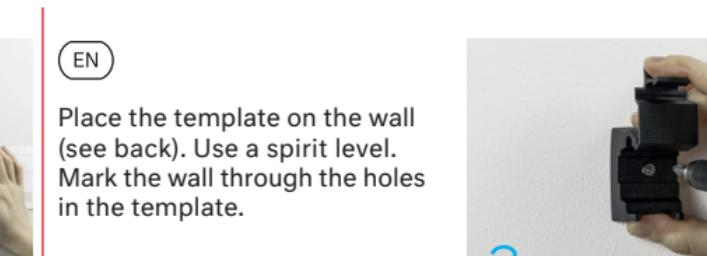


Fit the seal to the back of the wall brackets. Note that the seal only fits one way.

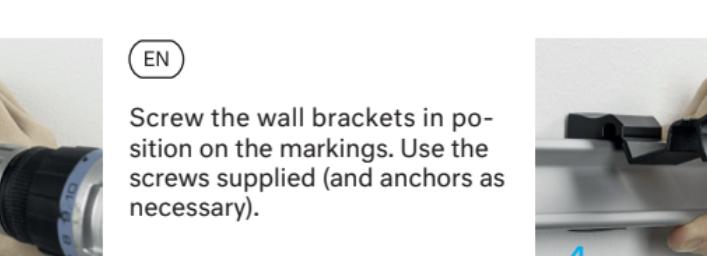


Place the template on the wall (see back). Use a spirit level. Mark the wall through the holes in the template.

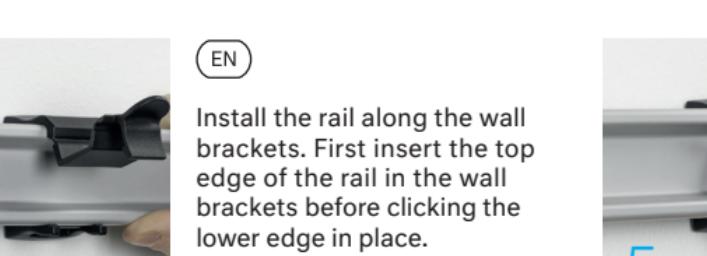

Screw the wall brackets in position on the markings. Use the screws supplied (and anchors as necessary).

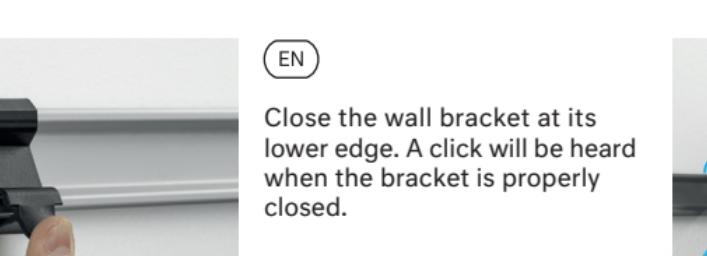

Close the wall bracket at its lower edge. A click will be heard when the bracket is properly closed.

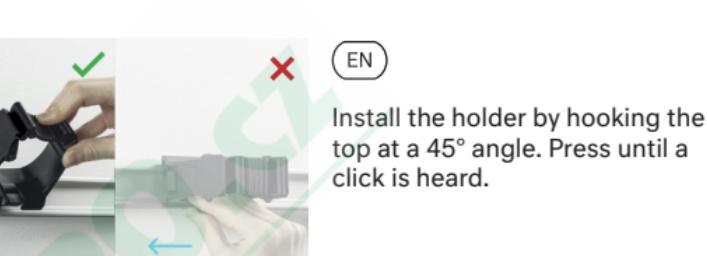

Remove all tools before removing the rail.



To release the rail, first click it out at the lower edge and then remove it.

EN Disassembly

FR Demontage

SE Demontering

ES Desmontaje

DE Demontage



All wall brackets must be opened before the rail is removed.




The tab on the holder must point down.



Install the rail along the wall brackets. First insert the top edge of the rail in the wall brackets before clicking the lower edge in place.



Close the wall bracket at its lower edge. A click will be heard when the bracket is properly closed.

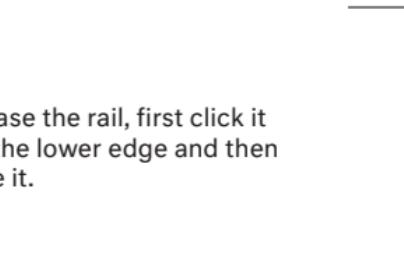

To release the rail, first click it out at the lower edge and then remove it.



Scan the QR-code for download of mounting video or visit toolflex.com

